Installation Instructions

- 1. Perform pre-alignment check in normal manner.
- 2. Install alignment equipment, record reading and determine amount of change needed.
- 3. Raise front of vehicle and support in safe manner.
- 4. Remove original cam assembly and install new cams in the same orientation as the original cams. Tighten loosely.
 - Note: If OE sleeves are seized in bushing you may need to use an upper control arm bushing service set to help with the removal. Otherwise, you may need to replace entire control arm assembly.
- 5. Adjust camber/caster to manufactures specifications by turning cam until needed adjustment is achieved.
- 6. Tighten nuts to manufactures specification (pump with grease if applicable.)
- 7. Proceed with alignment and road test vehicle.

95-310-0517

Installation Instructions

- 1. Perform pre-alignment check in normal manner.
- 2. Install alignment equipment, record reading and determine amount of change needed.
- 3. Raise front of vehicle and support in safe manner.
- 4. Remove original cam assembly and install new cams in the same orientation as the original cams. Tighten loosely.
 - Note: If OE sleeves are seized in bushing you may need to use an upper control arm bushing service set to help with the removal. Otherwise, you may need to replace entire control arm assembly.
- 5. Adjust camber/caster to manufactures specifications by turning cam until needed adjustment is achieved.
- 6. Tighten nuts to manufactures specification (pump with grease if applicable.)
- 7. Proceed with alignment and road test vehicle.

95-310-0517

Installation Instructions

- 1. Perform pre-alignment check in normal manner.
- 2. Install alignment equipment, record reading and determine amount of change needed.
- 3. Raise front of vehicle and support in safe manner.
- 4. Remove original cam assembly and install new cams in the same orientation as the original cams. Tighten loosely.
 - Note: If OE sleeves are seized in bushing you may need to use an upper control arm bushing service set to help with the removal. Otherwise, you may need to replace entire control arm assembly.
- 5. Adjust camber/caster to manufactures specifications by turning cam until needed adjustment is achieved.
- 6. Tighten nuts to manufactures specification (pump with grease if applicable.)
- 7. Proceed with alignment and road test vehicle.

95-310-0517